

BENDTSEN ROUGHNESS AND POROSITY

Smoothness or its inverse roughness is a property that influences both the appearance and the functionality of the paper. From the point of view of paper printing, it refers to the perfection of a paper's surface and the degree to which its uniformity resembles the surface of flat glass. Paper is said to have a smooth or rough texture, meaning that the irregularities on its surface are small or large. In the paper industry, the quality of the paper's surface or smoothness is often referred to as finishing or satin.



Papers are very different in their relative smoothness, because smoothness depends on other properties of the paper. Short fibers produce a smoother paper than long fibers. The preparation of the pulp and the way in which the fibers are distributed as the paper is formed on the machine fabric, have a great influence on the formation and the smoothness or roughness.

Bendtsen surface roughness is calculated from the air flow at the contact surface between a flat surface (glass plate substrate), circular measurement head and a paper or cardboard sample resting on

EIGENSCHAFTEN

- Easy to use
- Safety of use
- Robust design
- New design of the measuring head, longer life
- No pressure switch is necessary
- 10 cm² measuring area
- Mini-air compressor included
- 3 rotameter tubes with ranges of:
 - 0 -100 ml / min.
 - 50 - 500 ml / min.
 - 300 - 3000 ml / min.
- POWER SUPPLY: 220 VAC single phase 50/60Hz
- POWER: 500 W
- TESTER DIMENSIONS: 305 x 415 x 250 mm (W x D X H)

TECHNISCHE DATEN

Power connection	100 V / 50 Hz, 230 V / 50 Hz
Compressed air connection	ja
PC connection	No PC connection
Width / Diameter	30 cm
Depth	41 cm
Height	25 cm
Weight (net)	22 kg

NORMEN

ISO 5636-3
SCAN P21
SCAN P60



ROUGHNESS AND POROSITY METER (Bendtsen method) BTA model

To quickly and accurately determine Roughness and Air Porosity on paper and cardboard by the Bendtsen method

ROUGHNESS AND AIR POROSITY METER BTA model

APPLICABLE STANDARDS

ISO 5636 / 8791/2 – SCAN P21 – DIN 53108 / 53120 – BS 4421...

GENERAL INFORMATION

Smoothness or its inverse **roughness** is a property that influences both the appearance and the functionality of the paper. From the point of view of paper printing, it refers to the perfection of a paper's surface and the degree to which its uniformity resembles the surface of flat glass. Paper is said to have a smooth or rough texture, meaning that the irregularities on its surface are small or large. In the paper industry, the quality of the paper's surface or smoothness is often referred to as finishing or satin.

Papers are very different in their relative smoothness, because smoothness depends on other properties of the paper. Short fibers produce a smoother paper than long fibers. The preparation of the pulp and the way in which the fibers are distributed as the paper is formed on the machine fabric, have a great influence on the formation and the smoothness or roughness.

Bendtsen surface roughness is calculated from the air flow at the contact surface between a flat surface (glass plate substrate), circular measurement head and a paper or cardboard sample resting on the glass plate.

The air passes through the space between the ground crown of the head and the contact surface of the paper or cardboard sample. Airflow, measured in ml / min, is a sample measurement of surface roughness.

Air porosity is defined as the ability of paper to allow a flow of air under pressure to pass through it. It is a property related to the structure of the paper that depends on the number, size, shape and distribution of the pores in a sheet

Paper is a very porous material, as can be seen from its low specific weight, compared to that of cellulose, its main component. The specific weight of paper, from 0.5 to 0.8 g/cm³, is considerably less than that of cellulose, of 1.5. Porosity can be defined as the ratio between the volume of the space occupied by air in a paper and its total volume.

The air content, in common papers is usually 50% and can reach up to 70%. This air is found in paper, in 3 ways:

1. Real pores that are openings through the sheet,
2. Superficial pores that are only connected to one of their surfaces
3. Holes that contain air inside the blade..


MEASUREMENT DESCRIPTION

To perform **Bendtsen Roughness** measurements, the paper or cardboard sample is placed on a glass plate (supplied with the equipment), then the smoothness measurement head is carefully placed on the sample, after 4- 5 seconds the value can be read on one of the rotameter tubes (the chosen one)

The Bendtsen Porosity measurement is measured as the air flow that passes through the sample through a surface of 10 cm², to measure the porosity, the sample is placed in the test area of the porosity measurement head, we press the button closing the jaws and in the same way as in the Smoothness, we can read the Porosity in the rotameter tube corresponding to the air flow that passes through the 10 cm² of the sample.



Roughness Measurement

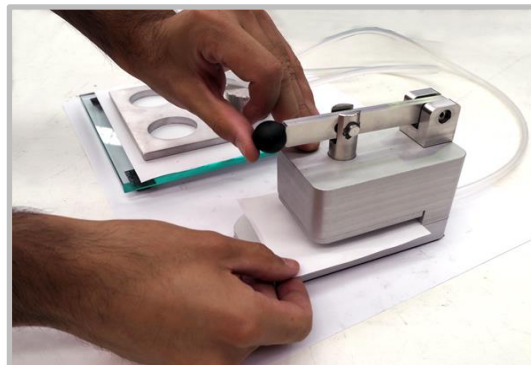

Porosity Measurement

NOTE: The standard supply includes only the head for roughness measurements, the Porosity head is optional and is priced separately.

- Easy to use
- Safety of use
- Robust design
- New design of the measuring head, longer life
- No pressure switch is necessary
- 10 cm² measuring area
- Mini-air compressor included
- 3 rotameter tubes with ranges of:
 - * 0 -100 ml / min.
 - * 50 - 500 ml / min.
 - * 300 - 3000 ml / min.

POWER SUPPLY: 220 VAC single-phase 50/60Hz

POWER: 500 W

TESTER DIMENSIONS: 305 x 415 x 250 mm (W x D X H)

NET WEIGHT: 22 Kg

TRANSPORT PACKAGING DIMENSIONS: 500 x 500 x 450 mm (W x D X H)

GROSS WEIGHT APPROX.: 40 Kg

CONTENTS OF THE STANDARD SUPPLY:

- * Roughness and Air Porosity Meter Bendtsen Method model BTA
- * Mini-air compressor
- * Roughness measuring head and silicone tube for connection to the equipment
- * Base glass to support paper samples
- * Aluminum template for smoothing the paper sample with 4 head cavities